


# Vapolution Vaporizer 2.0 Concentrate Bowl Instructions



**1.** Turn on the Vapolution 2.0 and set the temperature to the 3 O'clock setting or higher. Oils and waxes like it hot. Let the Vapolution 2.0 warm up for at least 5 minutes before use.



**2.** Position the retaining washer as you would for the dry herb bowl. The washer should be 2.75 inches from the closed end of the bowl. Use the photo above as a reference.

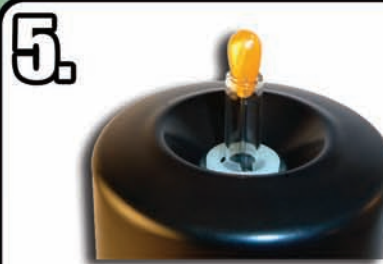

**5.** Place the Concentrate Bowl and the Dab Tool into the preheated Vapolution 2.0. Wait 10-15 seconds. Remove the Concentrate Bowl from the Vapolution 2.0. Make sure all the wax has melted off the tool. Remove the Dab Tool from the Concentrate Bowl.



**6.** Put the tubing on the loaded Concentrate Bowl and place it back inside the Vapolution 2.0. Wait 10-15 seconds before you inhale. You should get 10-20 hits off of a small dab. Enjoy pure oil vapor!



**3.** Scoop a small dab on the end of the Dab Tool. Try to keep it on the front of the spoon. You only need a small amount. Too much will make it hard to put inside the Concentrate Bowl. A little bit of oil or wax, goes a long way in the Vapolution 2.0.



**4.** Carefully slide the loaded Dab Tool into the Concentrate Bowl until the handle rests on the top of the glass.

## Cleaning

After a few several uses, the Concentrate Bowl will need to be cleaned. First, using a long Q-tip, swab out as much residue as possible. This should be done while the Concentrate Bowl is hot for the best results. You will then need to burn off the remaining residue with a propane torch or a gas cooktop / stove. Use a gentle flame to burn off the remaining residue. Heat the residue with the flame until it glows red and disappears. Using too hot of a flame can melt the glass and deform your Concentrate Bowl. Be careful to not burn yourself.